

SETTING THE GAME TIME

NOTE: If clock is showing time of day:

- Press SET
- Press CLOCK MODES
- Press YES to "DO YOU WANT TO SET MAIN TIME?"

- Press SET
- Press TIME
- Enter the time, including the colon - 15:00
- Press YES
- Enter the period number
- If time needs to be corrected, simply follow the SET GAME TIME instructions

SETTING THE SCORE

- Press HOME SCORE or GUEST SCORE
- Press 1 to add 1 to the score

CORRECTING THE SCORE

- Press SET
- Press HOME SCORE or GUEST SCORE
- Enter the correct score

SETTING PENALTIES

- Press SET
- Press HOME PNLTY or GUEST PNLTY
- Enter the penalty time, including the colon – 2:00 for a 2 minute penalty
- Press YES
- Enter player's number using 2 digits – 2 then 3 for #23, 0 then 4 for #4

NOTE:

- You can enter up to 5 penalties for 1 player and up to 26 players
- If you have 2 penalties already showing, then the 3rd will start automatically when the 2nd ends
- Entering the player number helps to clear the proper penalty if a power play goal is scored

CLEARING A PENALTY

- Press HOME PNLTY or GUEST PNLTY until the correct player number shows
- Press PNLTY CLEAR
- Press YES

CORRECTING/CHANGING A PENALTY

- Press HOME PNLTY or GUEST PNLTY until the correct player # shows
- Press PNLTY EDIT
- Press YES
- Enter new time including the colon

HORN

- Sound automatically at the end of a period
- Stop the horn the same way you stop the clock
- If Running Time expires, press HORN to sound horn